



IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR
OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.


**BEFORE YOU RETURN THE PRODUCT TO THE STORE,
PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE**

(888) 777-8250

OR SEND US EMAIL AT


help@spartakent.com

PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU

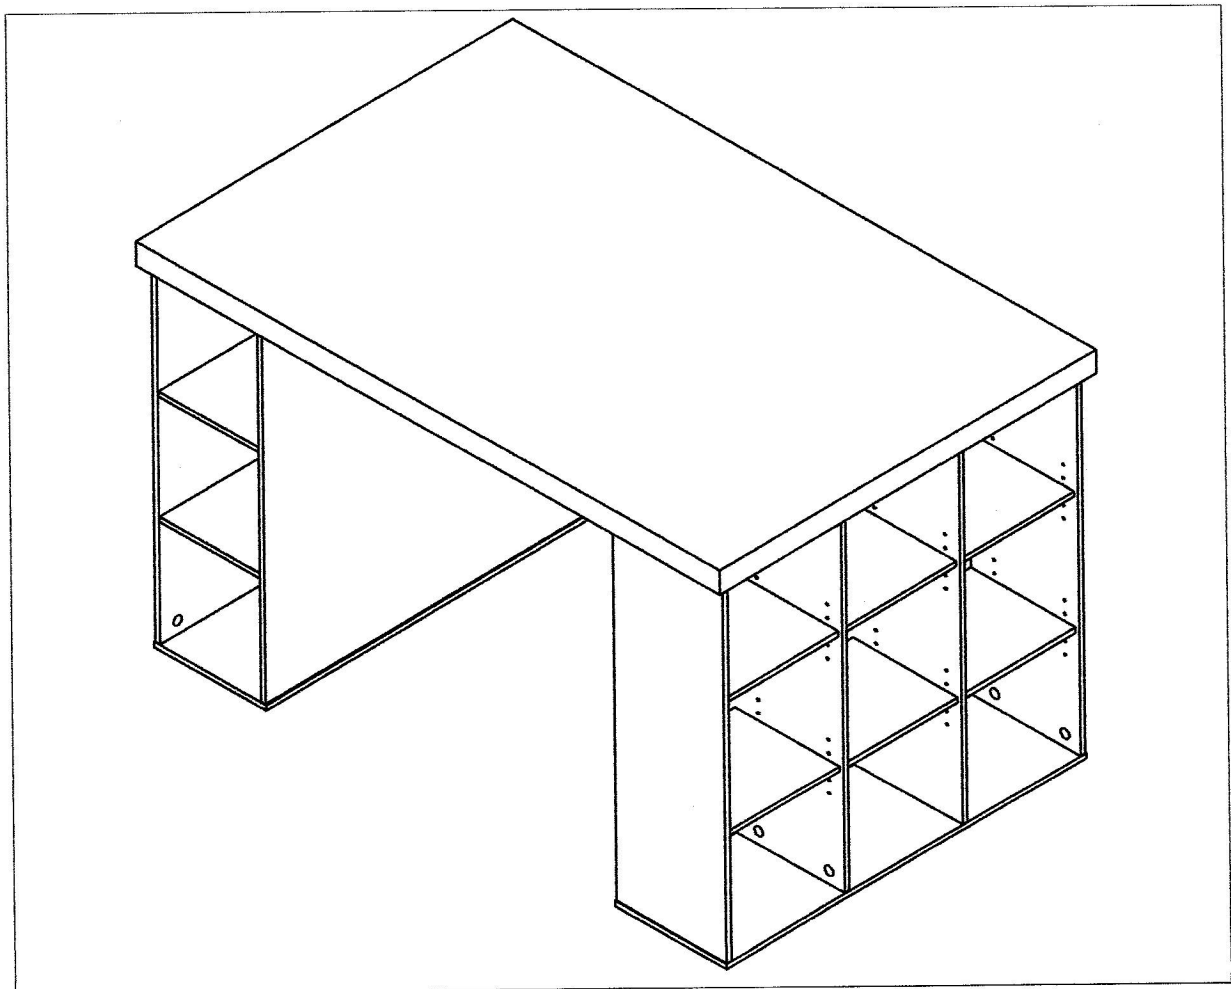

1

Note: Place one side unit at the desired location and then place the other side unit within 30 and 3/8 inches apart as shown below. Make sure when you position the side units that they will fall within the 1/2 inched recessed area of the top.

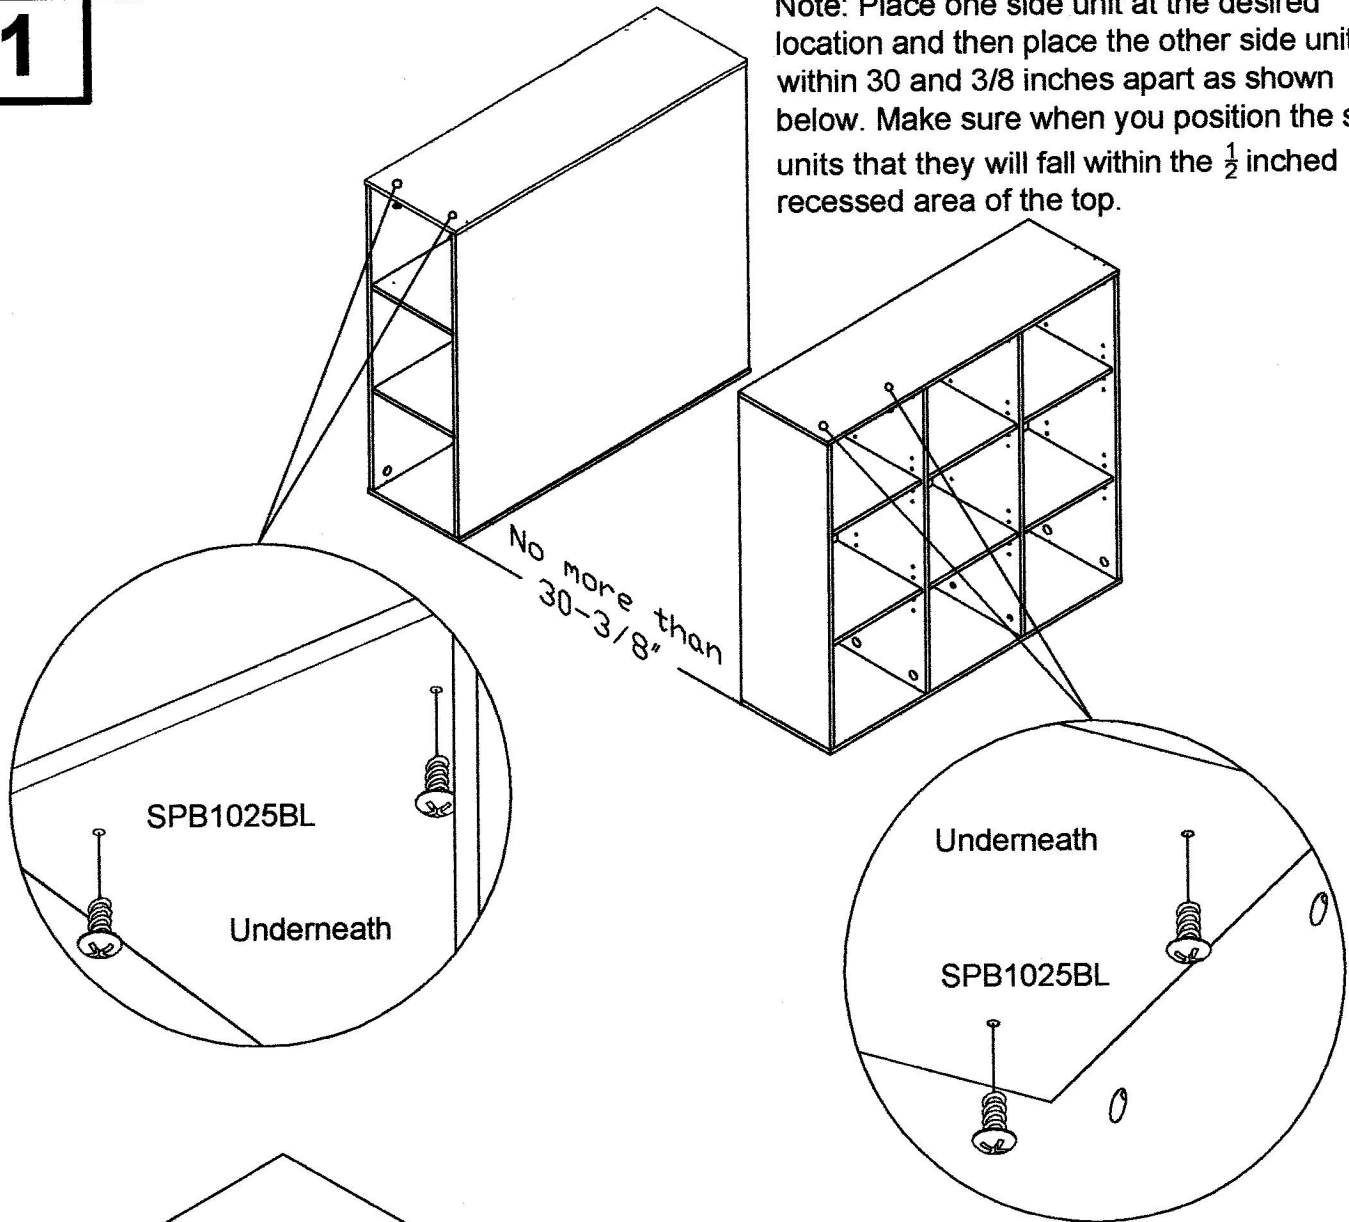

Optional - If you want to permanently attach the top to the side units then there are a total of 8 half way pre-drilled holes on each side unit. You need to apply pressure on the top either with your hand or a heavy object. This way you can easily fasten the screws. There are two bags of 8 screws that's needed (already provided with the side units hardware.)

Note: Next, once you have placed where the sides will be for the work station, lay the top as you align the sides within the recessed area.

